


Vstupy tlaku, odvzdušnění


Vstupy tlaku „M“

M	M10x1	M12x1,5	M14x1,5	M16x1,5	M18x1,5	M20x1,5	M22x1,5	M27x2	M33x2	M42x2
∅A	16	18	20	22	24	26	29	36	43	49
∅B	20	22	24	26	28	30	32	40	50	62
C	0,5	0,5	1	1	1	1	1	1,5	1,5	2
D	12	18	18	18	18	18	18	22	22	25

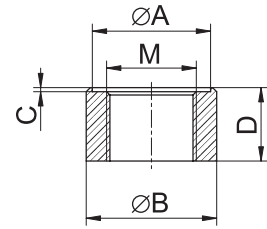


Vstupy tlaku pro pádové ventily „M“

M	M14x1,5	M16x1,5	M18x1,5	M20x1,5	M22x1,5	M27x2
∅A	20	24	24	26	29	36
∅B	24	28	28	30	32	40
C	1	1	1	1	1	1,5
D	22	26	26	30	30	38
E	34	38	38	46	46	55,5
F	40	45	45	50	50	60

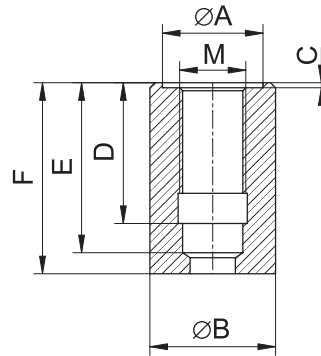


Vstupy tlaku „G“

G	G1/4"	G3/8"	G1/2"	G3/4"	G1"
∅A	20	24	29	36	41
∅B	24	28	32	40	50
C	1	1	1	1,5	1,5
D	18	18	18	22	25

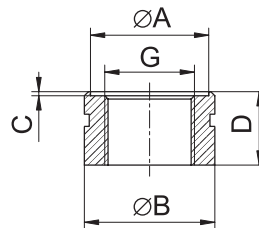

Vstupy tlaku pro pádové ventily „G“

G	G1/4"	G3/8"	G1/2"	G3/4"
∅A	20	24	29	36
∅B	24	28	32	40
C	1	1	1	1,5
D	22	26	30	38
E	34	38	46	55,5
F	40	45	50	60

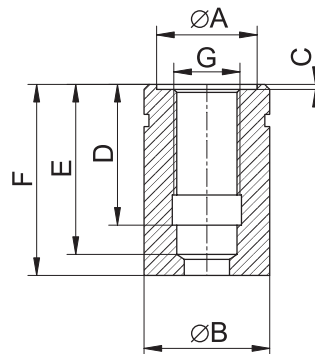

Odvzdušnění

